

V_{RSM}, V_{RRM}	V _{VRMS}	$I_D = 20 \text{ A } (T_c = 73 ^{\circ}\text{C})$	C _{max}	R_{min}
V	V	Types	μF	Ω
200		SKD 25/02		0,15
400		SKD 25/04		0,3
800		SKD 25/08		0,7
1200		SKD 25/12		1
1400		SKD 25/14		1,2
1600		SKD 25/16		1,5

Power Bridge Rectifiers

SKD 25


Features


- Square plastic case with isolated metal base plate and fast-on connectors
- Blocking voltage to 1600 V
- High surge current
- · Easy chassis mounting
- UL recognized, file no. E 63 532


Typical Applications*


- Three phase rectifier for power supplies
- Input rectifiers for variable frequency drives
- Rectifier for DC motor field supplies
- · Battery charger rectifiers
- Recommended snubber network: RC: 50 Ω , 0.1 μ F (P $_{R}$ = 1 W)
- 1) Freely suspended or mounted on an insulator
- 2) Mounted on a painted metal sheet of min. 250 x 250 x 1 mm


Symbol	Conditions	Values	Units
I _D	T _a = 45 °C, isolated ¹⁾	3,5	Α
_	T _a = 45 °C, chassis ²⁾	12	Α
I _{DCL}	T _a = 45 °C, isolated ¹⁾	3,5	Α
	T _a = 45 °C, chassis ²⁾	12	Α
	$T_a = {^{\circ}C},$		А
I _{FSM}	T _{vi} = 25 °C, 10 ms	370	Α
	T _{vi} = 150 °C, 10 ms	320	Α
i²t	T _{vi} = 25 °C, 8,3 10 ms	680	A²s
	T _{vj} = 150 °C, 8,3 10 ms	500	A²s
V _F	T _{vi} = 25°C, I _F = 150 A	max. 2,2	V
V _(TO)	T _{vi} = 150°C	max. 0,85	V
r _T	T _{vi} = 150°C	max. 12	mΩ
I_{RD}	$T_{vi} = 25$ °C, $V_{RD} = V_{RRM}$	300	μA
	$T_{vi} = {^{\circ}C}, V_{RD} = V_{RRM} \ge V$		μA
I_{RD}	$T_{vj} = 150$ °C, $V_{RD} = V_{RRM}$	5	mA
	$T_{vj} = {^{\circ}C}, V_{RD} = V_{RRM} \ge V$		mA
t _{rr}	$T_{vj} = 25^{\circ}C$	10	μs
f_G		2000	Hz
$R_{th(j-a)}$	isolated ¹⁾	15	K/W
• ,	chassis ²⁾	4,7	K/W
$R_{th(j-c)}$	total	1,75	K/W
R _{th(c-s)}	total	0,15	K/W
T_{vj}		- 40 + 150	°C
T _{stg}		- 55 + 150	°C
V _{isol}	a. c. 50 60 Hz; r.m.s.; 1 s / 1 min.	3000 / 2500	V~
M_s	to heatsink	2 ± 15 %	Nm
M_t			Nm
а			m/s²
w		26	g
Fu		20	А
Case		G 11b	

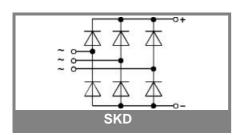


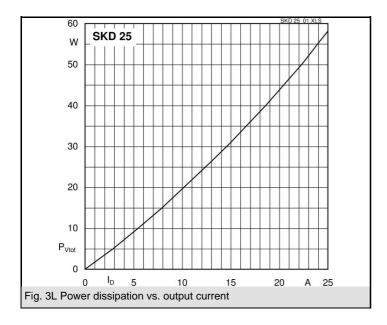

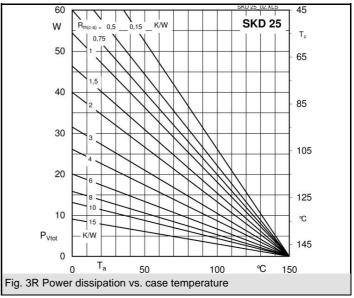

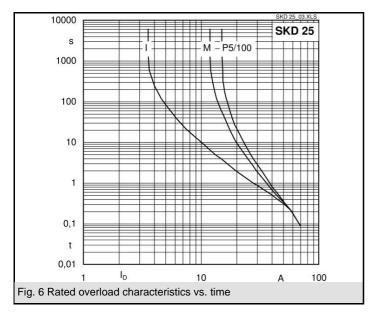

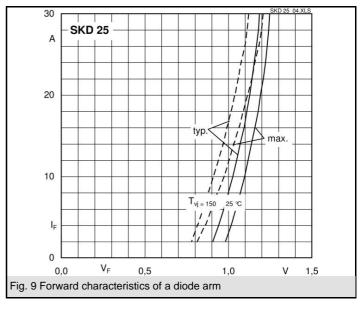

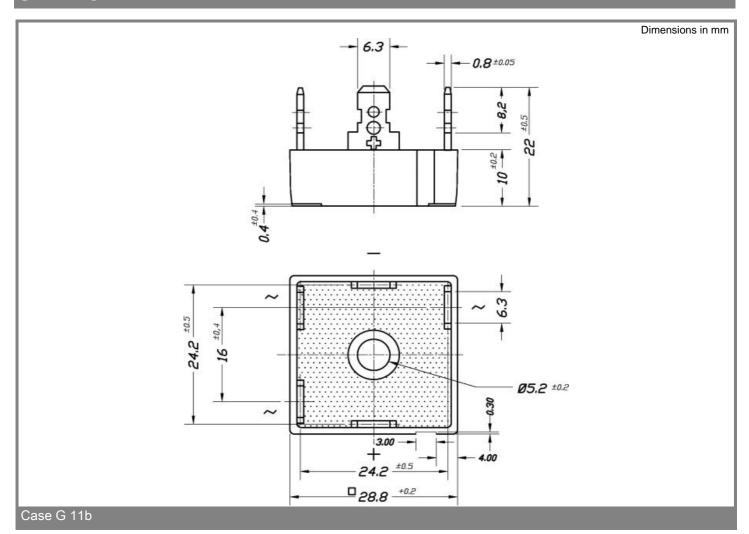

^{*} The specifications of our components may not be considered as an assurance of component characteristics. Components have to be tested for the respective application. Adjustments may be necessary. The use of SEMIKRON products in life support appliances and systems is subject to prior specification and written approval by SEMIKRON. We therefore strongly recommend prior consultation of our personal.